


Thule Professional Fit Guide

Heavy-Duty Load Carriers

2009 →

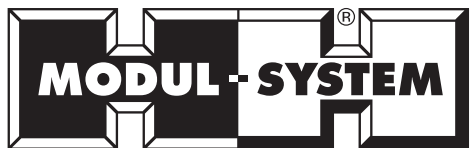

We make your van work smarter

THULE[®]
SWEDEN

PROFESSIONAL

Your dynamic platform for heavy-duty purposes



Thule Professional is a fully integrated system, so tailoring it to your specific needs and way of working is quick and easy. All you need is the make, model and year of your work Van – and then follow the recommendations presented in this easy-to-use fit guide.

All products in this guide are tested on each specific vehicle model and Thule guarantees that the recommended products will fit your vehicle. If you follow our recommendations, we can assure you a high safety standard.

If you cannot find your vehicle model listed here, then visit Thule Professional's interactive fit guide at our website **www.thuleprofessional.com**, for an up-to-date list of vehicle fittings.

Car make

Look up the page where your vehicle make, model and model year is listed. All makes appear in alphabetical order.

Recommendation

The recommended solution for your vehicle includes all necessary parts for a complete Heavy-Duty Bar solution. For some vehicles, we list solutions with 2, 3 and 4 bars.

Thule Heavy-Duty Load Carriers









Technical specifications



BARS

Item number (2 Pieces)	390	391	392	393	394	395
Item number (1 Piece)	3901	3911	3921	3931	3941	3951
Length (mm)	1200	1350	1500	1750	2000	2200

FEET

Type of vehicle roof	fix points		roof rails		normal	rain gutter		
Type of foot								
Product name	Rapid Fixpoint XT	Rapid Fixpoint XT Low	Rapid Railing	Rapid Crossroad	Rapid System	Gutter Foot	Gutter Foot	Gutter Foot
Item number (4 Pieces)	751	753	757	775	750	9512	9522	9531
Item number (2 Pieces)	7511	7531						
Load capacity, per pair of bars (kg) ¹	100	100	100	100	75	100	100	100
Foot height (cm) ²	9,5	5,2	7,5	5,5	14	15	20	28
Lock	Included	Included	Included	Included		527	527	527
Fitting kit needed	yes	yes	no	no	yes	no	no	no
Tool key 379 needed	no	no	no	no	yes	no	no	no
TÜV approved	yes	yes	yes	yes	yes	yes	yes	yes
Fulfills City Crash norms	yes	yes	yes	yes				
Miscellaneous			Railing sizes 22–55 mm	Railing sizes 20–68 mm				

¹Maximum load is the maximum approved weight for each type of load carrier. Consult your car manual for your car's maximum load limit. ²Foot height is the distance from the base of the foot to the top of the bar. Please note: for distances to the bottom of the bar, deduct 22 mm for squarebars and 27 mm for aero bars.

Heavy-Duty Load Carriers: Fit Guide

*Check mounting instruction for correct positioning



CAR MAKE

CITROËN

CAR MAKE	1x*				2x*				3x*				4x*				Toolkey needed	Max load (kg)		
	Foot	Bar	Kit	Lock	Foot	Bar	Kit	Lock	Foot	Bar	Kit	Lock	Foot	Bar	Kit	Lock		2 bars	3 bars	4 bars
Berlingo Top, 5-dr, MPV with roof railing, 01-07					757	391		Incl.										100		
Berlingo, 5-dr, Van with roof railing, 97-07					757	391		Incl.										100		
Berlingo, 5-dr, Van without roof railing, 97-07					750	391	1184										379	50		
Berlingo, 4-dr, Van with fixpoint, 08-	7531	3911	3072	Incl.	751	391	3072	Incl.	7531+751	3911+391	3072+3072	Incl.						100	150	
C8, 5-dr, MPV with T-profile, 02-					753	391	3035	Incl.	7531+753	3911+391	3035+3035	Incl.	753+753	391+391	3035+3035	Incl.		100	150	200
Dispatch, 3-dr, Van with fixpoint, 97-06					753	391	3023	Incl.					753+753	391+391	3048+3023	Incl.		100		200
Dispatch, 4-dr, Van with fixpoint, 97-06					753	391	3023	Incl.					753+753	391+391	3048+3023	Incl.		100		200
Dispatch, 5-dr, Van with fixpoint, 97-06					753	391	3023	Incl.					753+753	391+391	3048+3023	Incl.		100		200
Dispatch, 4-dr, Van with fixpoint, 07-	7531	3911	3055	Incl.	753	391	3051	Incl.	7531+753	3911+391	3055+3051	Incl.	753+753	391+391	3055+3051	Incl.		100	150	200
Dispatch, 5-dr, Van with fixpoint, 07-	7531	3911	3055	Incl.	753	391	3051	Incl.	7531+753	3911+391	3055+3051	Incl.	753+753	391+391	3055+3051	Incl.		100	150	200
Evasion, 5-dr, MPV with T-profile, 94-01					753	391	3035	Incl.	7531+753	3911+391	3035+3035	Incl.	753+753	391+391	3035+3035	Incl.		100	150	200
Jumper, 3-dr, Van with fixpoint, 95-01, 02-06	7531	3931	3054	Incl.	753	393	3054	Incl.	7531+753	3931+393	3054+3054	Incl.	753+753	393+393	3054+3054	Incl.		100	150	200
Jumper, 4-dr, Van with fixpoint, 95-01, 02-06	7531	3931	3054	Incl.	753	393	3054	Incl.	7531+753	3931+393	3054+3054	Incl.	753+753	393+393	3054+3054	Incl.		100	150	200
Jumper, 5-dr, Van with fixpoint, 95-01, 02-06	7531	3931	3054	Incl.	753	393	3054	Incl.	7531+753	3931+393	3054+3054	Incl.	753+753	393+393	3054+3054	Incl.		100	150	200
Jumper, 4-dr, Van with fixpoint, 06-	7511	3931	3031	Incl.	751	393	3031	Incl.	7511+751	3931+393	3031+3031	Incl.	751+751	393+393	3031+3031	Incl.		100	150	200
Jumper, 2-dr, Single Cab, 06-	750	3931	1439														379	30		
Jumper, 4-dr, Double Cab, 06-					750	393	1439										379	60		
Jumpy, 3-dr, Van with fixpoint, 97-06					753	391	3023	Incl.					753+753	391+391	3048+3023	Incl.		100		200
Jumpy, 4-dr, Van with fixpoint, 97-06					753	391	3023	Incl.					753+753	391+391	3048+3023	Incl.		100		200
Jumpy, 5-dr, Van with fixpoint, 97-06					753	391	3023	Incl.					753+753	391+391	3048+3023	Incl.		100		200
Jumpy III, 4-dr, Van with fixpoint, 07-	7531	3911	3055	Incl.	753	391	3051	Incl.	7531+753	3911+391	3055+3051	Incl.	753+753	391+391	3055+3051	Incl.		100	150	200
Jumpy III, 5-dr, Van with fixpoint, 07-	7531	3911	3055	Incl.	753	391	3051	Incl.	7531+753	3911+391	3055+3051	Incl.	753+753	391+391	3055+3051	Incl.		100	150	200
Nemo, 3/4/5-dr, Van with fixpoint, 08-	7531	3911	3070	Incl.	751	391	3070	Incl.	7531+751	3911+391	3070+3070	Incl.						100	150	
Nemo, 3/4/5-dr, Van with roof railing, 08-					775	391		Incl.										75		

FIAT

Doblo, 3/4/5-dr, Van with fixpoint, 00-	7511	3921	3076	Incl.	753	392	3021	Incl.	7511+753	3921+392	3076+3021	Incl.						75	112	
Doblo Maxi, 4-dr, Van with fixpoint, 08-	7511	3921	3076	Incl.	753	392	3021	Incl.	7511+753	3921+392	3076+3021	Incl.						75	112	
Doblo, 5-dr, Van with fixpoint, high roof, 00-					No fit															

CAR MAKE	1x*				2x*				3x*				4x*				Toolkey needed	Max load (kg)		
	Foot	Bar	Kit	Lock	Foot	Bar	Kit	Lock	Foot	Bar	Kit	Lock	Foot	Bar	Kit	Lock		2 bars	3 bars	4 bars

FIAT

Doblo Mailibo, 5-dr, Van with roof railing, 00-					757	391		Incl.												100		
Ducato, 3-dr, Van with fixpoint, 95-01, 02-06	7531	3931	3054	Incl.	753	393	3054	Incl.	7531+753	3931+393	3054+3054	Incl.	753+753	393+393	3054+3054	Incl.				100	150	200
Ducato, 4-dr, Van with fixpoint, 95-01, 02-06	7531	3931	3054	Incl.	753	393	3054	Incl.	7531+753	3931+393	3054+3054	Incl.	753+753	393+393	3054+3054	Incl.				100	150	200
Ducato, 5-dr, Van with fixpoint, 95-01, 02-06	7531	3931	3054	Incl.	753	393	3054	Incl.	7531+753	3931+393	3054+3054	Incl.	753+753	393+393	3054+3054	Incl.				100	150	200
Ducato 4-dr, Van with fixpoint, 06-	7511	3931	3031	Incl.	751	393	3031	Incl.	7511+751	3931+393	3031+3031	Incl.	751+751	393+393	3031+3031	Incl.				100	150	200
Ducato, 2-dr, Single cab, 06-	750	3931	1439														379	30				
Ducato, 4-dr, Double cab, 06-					750	393	1439										379	60				
Fiorino, 3/4/5-dr, Van with fixpoint, 08-	7531	3911	3070	Incl.	751	391	3070	Incl.	7531+751	3911	3070+3070	Incl.								100	150	
Fiorino, 3/4/5-dr, Van with roof railing, 08-					775	391														100		
Scudo, 3-dr, Van with fixpoint, 97-06					753	391	3023	Incl.					753+753	391+391	3048+3023	Incl.				100		200
Scudo, 4-dr, Van with fixpoint, 97-06					753	391	3023	Incl.					753+753	391+391	3048+3023	Incl.				100		200
Scudo, 5-dr, Van with fixpoint, 97-06					753	391	3023	Incl.					753+753	391+391	3048+3023	Incl.				100		200
Scudo, 4-dr, Van with fixpoint, 07-	7531	3911	3055	Incl.	753	391	3051	Incl.	7531+753	3911+391	3055+3051	Incl.	753+753	391+391	3055+3051	Incl.				100	150	200
Scudo, 5-dr, Van with fixpoint, 07-	7531	3911	3055	Incl.	753	391	3051	Incl.	7531+753	3911+391	3055+3051	Incl.	753+753	391+391	3055+3051	Incl.				100	150	200
Strada, 2-dr, Pickup, 04-					No fit																	
Strada, 2-dr, Pickup, with roof railing, extended, 04-					757	390		Incl.												100		
Strada, 2-dr, Pickup with roof railing, 04-					No fit																	
Ulysse, 5-dr, MPV with T-profile, 94-01, 02-					753	391	3035	Incl.	753+753	3911+391	3035+3035	Incl.	753+753	391+391	3035+3035	Incl.				100	150	200

FORD

Ranger, 2-dr, Single cab, 98-02, 03-	750	391	1292														379	25				
Ranger, 4-dr, Double cab, 98-02, 03-					750	391	1292										379	50				
Ranger, 4-dr, Super cab, 98-02, 03-					750	391	1292										379	50				
Connect Tourneo, 5-dr, Van with fixpoint, 03-					753	392	3021	Incl.												75		
Connect Transit, 4-dr, Van with fixpoint, 03-					753	392	3021	Incl.												75		
Transit, 120/130/160/190, 75-85	9522	3931	527		9522	393		527	9522+9522	3931+393		527	9522+9522	393+393		527				100	150	200
Transit, 120/130/160/190, 86-99	9512	3931	527		9512	393		527	9512+9512	3931+393		527	9512+9512	393+393		527				100	150	200
Transit, 2-dr, Pickup, 00-05, 06-	9512	3931	527																	50		
Transit, 4-dr, Double cab, 00-05, 06-					9512	393		527												100		

> Heavy-Duty Load Carriers: Fit Guide

*Check mounting instruction for correct positioning



CAR MAKE

FORD

CAR MAKE	1x*				2x*				3x*				4x*				Toolkey needed	Max load (kg)		
	Foot	Bar	Kit	Lock	Foot	Bar	Kit	Lock	Foot	Bar	Kit	Lock	Foot	Bar	Kit	Lock		2 bars	3 bars	4 bars
Transit, 5-dr, Van, 00-05	9522	3931		527	9522	393		527	9522+9522	3931+393		527	9522+9522	393+393		527		100	150	200
Transit, 5-dr, Van (normal roof), 06-	9512	3931		527	9512	393		527	9512+9512	3931+393		527	9512+9512	393+393		527		100	150	200
Transit, 5-dr, Van, medium, large, jumbo (high roof), 06-	9522	3931		527	9522	393		527	9522+9522	3931+393		527	9522+9522	393+393		527		100	150	200
Transit, 5-dr, Van, short (high roof), 06-					No fit															
Transit, 5-dr, Van, (extra high roof), 06-					No fit															

HYUNDAI

H-1, 4-dr, Van with roof railing, 97-07					757	390		Incl.										100		
H-1, 4-dr, Van , 97-07; See info kit 2126																				
Starex, 5-dr, Van with roof railing, 97-07					757	390		Incl.										100		
Starex, 5-dr, Van, 97-07; See info kit 2126																				
H-1, 5-dr, Van with roof railing, 08-					775	392		Incl.										75		
H-1, 5-dr, Van 08-	750	3931	1469		750	393	1475		750+750	3931+393	1469+1475		750+750	393+393	1469+1475		379	60	80	80
iLoad, 5-dr, Van 08-	750	3931	1469		750	393	1475		750+750	3931+393	1469+1475		750+750	393+393	1469+1475		379	60	80	80
Starex, 5-dr, Bus , 08-	750	3931	1469		750	393	1475		750+750	3931+393	1469+1475		750+750	393+393	1469+1475		379	60	80	80

ISUZU

D-Max Rodeo, 4-dr, Double cab, 02-					750	391	1461											379	60	
D-Max Rodeo, 2-dr, Single cab, 02-					750	391	1494											379	50	

IVECO

Daily, 3-dr, Van with fixpoint, 99-	7531	3931	3054	Incl.	753	393	3054	Incl.	7531+753	3931+393	3054+3054	Incl.	753+753	393+393	3054+3054	Incl.		100	150	200
Daily, 4-dr, Van with fixpoint, 99-	7531	3931	3054	Incl.	753	393	3054	Incl.	7531+753	3931+393	3054+3054	Incl.	753+753	393+393	3054+3054	Incl.		100	150	200
Daily, 5-dr, Van with fixpoint, 99-	7531	3931	3054	Incl.	753	393	3054	Incl.	7531+753	3931+393	3054+3054	Incl.	753+753	393+393	3054+3054	Incl.		100	150	200

LANCIA

Phedra, 5-dr, MPV with T-profile, 02-					753	391	3035	Incl.					753+753	391+391	3035+3035			100		200
Zeta, 5-dr, MPV with T-Profile, 94-01					753	391	3035	Incl.					753+753	391+391	3035+3035			100		200

> Heavy-Duty Load Carriers: Fit Guide

*Check mounting instruction for correct positioning

CAR MAKE	1x*				2x*				3x*				4x*				Toolkey needed	Max load (kg)		
	Foot	Bar	Kit	Lock	Foot	Bar	Kit	Lock	Foot	Bar	Kit	Lock	Foot	Bar	Kit	Lock		2 bars	3 bars	4 bars

LDV

Maxus, 4-dr, Van, 05-	7511	3931	3052	Incl.	751	393	3052	Incl.	7511+751	3931+393	3052+3052	Incl.	751+751	393+393	3052+3052	Incl.		75	112	150
-----------------------	------	------	------	-------	-----	-----	------	-------	----------	----------	-----------	-------	---------	---------	-----------	-------	--	----	-----	-----

MAZDA


B-serie, 2-dr, Single cab, 98-	750	3921	1292														379	25		
B-serie, 4-dr, Double cab, 98-					750	3921	1292										379	50		
BT 50, 4-dr, Double cab, 07-					750	392	1292										379	50		
BT 50, 2-dr, Single Cab, 07-	750	3921	1292														379	25		
BT 50, 4-dr, Crew cab, 07-					750	392	1292										379	50		
Freestyle, 4-dr, Maxi cab, 03-					750	392	1292										379	50		
Pickup B 2000, 2-dr, Pickup, 95-05	9511	3921		527													25			

MERCEDES

Sprinter, 4-dr, Van, 95-05					9521	394		527					9521	394		527		100		200
Sprinter, 4-dr, Van, with extra high roof, 95-05					No fit															
Sprinter, 4-dr, Van with T-profile, high roof, 06-	7531	3931	3062	Incl.	753	393	3062	Incl.	7531+753	3931+393	3062+3062	Incl.	753+753	393+393	3062+3062	Incl.		100	150	200
Sprinter, 4-dr, Van with T-profile, extra high roof, 06-					No fit															
Sprinter, 4-dr, Van with fixpoint, 06-	7531	3931	3032	Incl.	753	393	3032	Incl.	7531+753	3931+393	3032+3032	Incl.	753+753	393+393	3032+3032	Incl.		100	150	200
Sprinter, 4-dr, Van with fixpoint, high roof, 06-	7531	3931	3032	Incl.	753	393	3032	Incl.	7531+753	3931+393	3032+3032	Incl.	753+753	393+393	3032+3032	Incl.		100	150	200
Sprinter, 4-dr, Van with fixpoint, extra high roof, 06-					No fit															
Vario, 5-dr, Van					No fit															
Vito, 4-dr, Van with T-profile, 96-03, 04-	7531	3931	3084	Incl.	753	393	3084	Incl.	7531+751	3931+393	3084+3084	Incl.	753+751	393+393	3084+3084	Incl.		100	150	200
Vito, 4-dr, Van with fixpoint, 04-	7531	3931	3029	Incl.	753	393	3029	Incl.	7531+751	3931+393	3029+3058	Incl.	753+751	393+393	3058+3029	Incl.		100	150	200
Vito, 4-dr, Van with roof railing, 97-					775	392		Incl.												
Viano, 5-dr, MPV, with T-profile, 96-03, 04-	7531	3931	3084	Incl.	753	393	3084	Incl.	7531+751	3931+393	3084+3084	Incl.	753+751	393+393	3084+3084	Incl.		100	150	200
Viano, 5-dr, MPV, with fixpoint, 04-	7531	3931	3029	Incl.	753	393	3029	Incl.	7531+751	3931+393	3029+3029	Incl.	753+751	393+393	3058+3029	Incl.		100	150	200
Viano, 5-dr, MPV with roof railing, 97-					775	392		Incl.										75		
Vaneo, 5-dr, MPV with roof railing, 02-					757	391		Incl.										100		

> Heavy-Duty Load Carriers: Fit Guide

*Check mounting instruction for correct positioning

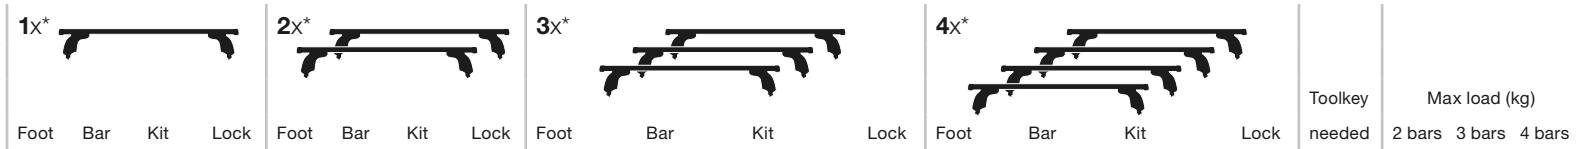

MITSUBISHI

Delica, 5-dr, Van, 83-94					9511	392		527											100		
Delica, 5-dr, Van, high roof 83-94					9521	392		527											100		
L200, 2-dr, Pickup, extended, 98-05	750	3921	1116															379	30		
L200, 2-dr, Pickup, 98-05	750	3921	1116															379	30		
L200, 4-dr, Double cab, 00-05					750	392	1236											379	75		
L200, 4-dr, Double cab, 98-05					750	392	1116											379	75		
L200, 2-dr, Pickup, extended, 05-					750	391	1401											379	50		
L200, 4-dr, Double cab, 05-					750	391	1400											379	50		
L300, 5-dr, Van, 81-02					9521	392		527					9521+9521	392+392		527			100		200

NISSAN

Interstar, 4-dr, Van with fixpoint, 02-	7531	3931	3045	Incl.	753	393	3045	Incl.	7531+753	3931+393	3045+3045	Incl.	753+753	393+393	3045+3045	Incl.			100	150	200
Interstar, 5-dr, Van with fixpoint, 02-	7531	3931	3045	Incl.	753	393	3045	Incl.	7531+753	3931+393	3045+3045	Incl.	753+753	393+393	3045+3045	Incl.			100	150	200
King Cab, 4-dr, Pickup double cab D22, 89-97, 98-01, 02-05					750	391	1086											379	75		
King Cab, 4-dr, Crew cab D40, 05-					750	391	1408											379	75		
King Cab, 2-dr, Single cab D40, 05-	750	3911	1408															379	30		
King Cab, 4-dr, Double cab D40, 05-					750	391	1430											379	75		
Kubistar, 5-dr, Van with fixpoint, 04-					753	391	3021	Incl.											75		
Navara, 4-dr, Double cab, 05-					750	391	1430											379	30		
Primastar, 4-dr, Van with fixpoint, 02-	7531	3931	3047	Incl.	753	393	3046	Incl.	7531+753	3931+393	3047+3046	Incl.	753+753	393+393	3047+3046	Incl.			100	150	200
Primastar, 5-dr, Van with fixpoint, 02-	7531	3931	3047	Incl.	753	393	3046	Incl.	7531+753	3931+393	3047+3046	Incl.	753+753	393+393	3047+3046	Incl.			100	150	200
Primastar, 5-dr, Van with fixpoint, high roof, 01-	7531	3921	3046	Incl.	753	392	3046	Incl.	7531+753	3921+392	3046+3046	Incl.	753+753	392+392	3046+3046	Incl.			100	150	200

OPEL

Combo, 3-dr, Van with fixpoint, 02-					753	392	3006	Incl.											75		
Combo, 4-dr, Van with fixpoint, 02-					753	392	3006	Incl.											75		
Combo, 5-dr, Van with fixpoint, 02-					753	392	3006	Incl.											75		
Combo tour, 4-dr, Van with fixpoint, 02-					753	392	3006	Incl.											75		
Combo tour, 5-dr, Van with fixpoint, 02-					753	392	3006	Incl.											75		

> Heavy-Duty Load Carriers: Fit Guide

*Check mounting instruction for correct positioning

CAR MAKE	1x*				2x*				3x*				4x*				Toolkey needed	Max load (kg)		
	Foot	Bar	Kit	Lock	Foot	Bar	Kit	Lock	Foot	Bar	Kit	Lock	Foot	Bar	Kit	Lock		2 bars	3 bars	4 bars

OPEL


Movano, 4-dr, Van with fixpoint, 98-03, 04-06, 07-	7531	3931	3045	Incl.	753	393	3045	Incl.	7531+753	3931+393	3045+3045	Incl.	753+753	393+393	3045+3045	Incl.		100	150	200
Movano, 5-dr, Van with fixpoint, 98-03, 04-06, 07-	7531	3931	3045	Incl.	753	393	3045	Incl.	7531+753	3931+393	3045+3045	Incl.	753+753	393+393	3045+3045	Incl.		100	150	200
Vivaro, 2-dr, Single cab with fixpoint, 01-	7531	3931	3047	Incl.													50			
Vivaro, 4-dr, Van with fixpoint, 01-	7531	3931	3047	Incl.	753	393	3046	Incl.	7531+753	3931+393	3047+3046	Incl.	753+753	393+393	3047+3046	Incl.		100	150	200
Vivaro, 5-dr, Van with fixpoint, 01-	7531	3931	3047	Incl.	753	393	3046	Incl.	7531+753	3931+393	3047+3046	Incl.	753+753	393+393	3047+3046	Incl.		100	150	200
Vivaro, 5-dr, Van with fixpoint, high roof, 01-	7531	3921	3046	Incl.	753	392	3046	Incl.	7531+753	3921+392	3046+3046	Incl.	753+753	392+392	3046+3046	Incl.		100	150	200

PEUGEOT

806, 5-dr, MPV with T-profile, 94-01					753	391	3035	Incl.										100		
807, 5-dr, MPV with T-profile, 02-					753	391	3035	Incl.										100		
Boxer, 3-dr, Van with fixpoint, 95-01, 02-06	7531	3931	3054	Incl.	753	393	3054	Incl.	7531+753	3931+393	3054+3054	Incl.	753+753	393+393	3054+3054	Incl.		100	150	200
Boxer, 4-dr, Van with fixpoint, 95-01, 02-06	7531	3931	3054	Incl.	753	393	3054	Incl.	7531+753	3931+393	3054+3054	Incl.	753+753	393+393	3054+3054	Incl.		100	150	200
Boxer, 5-dr, Van with fixpoint, 95-01, 02-06	7531	3931	3054	Incl.	753	393	3054	Incl.	7531+753	3931+393	3054+3054	Incl.	753+753	393+393	3054+3054	Incl.		100	150	200
Boxer, 4-dr, Van with fixpoint, 06-	7531	3931	3031	Incl.	753	393	3031	Incl.	7531+753	3931+393	3031+3031	Incl.	753+753	393+393	3031+3031	Incl.		100	150	200
Boxer, 2-dr, Single cab, 06-	750	3931	1439														379	30		
Boxer, 4-dr, Double cab, 06-					750	393	1439										379	60		
Expert, 3-dr, Van with fixpoint, 97-06					753	391	3023	Incl.					753+753	391+391	3048+3023	Incl.		100		200
Expert, 4-dr, Van with fixpoint, 97-06					753	391	3023	Incl.					753+753	391+391	3048+3023	Incl.		100		200
Expert, 5-dr, Van with fixpoint, 97-06					753	391	3023	Incl.					753+753	391+391	3048+3023	Incl.		100		200
Expert, 4-dr, Van with fixpoint, 07-	7531	3911	3055	Incl.	753	391	3051	Incl.	7531+753	3911+391	3055+3051	Incl.	753+753	391+391	3055+3051	Incl.		100	150	200
Expert, 5-dr, Van with fixpoint, 07-	7531	3911	3055	Incl.	753	391	3051	Incl.	7531+753	3911+391	3055+3051	Incl.	753+753	391+391	3055+3051	Incl.		100	150	200
Partner, 3/4/5-dr, Van, 97-07					750	392	1184										379	50		
Partner, 3/4/5-dr, Van, 08-	7531	3911	3072	Incl.	751	391	3072	Incl.	7531+751	3911+391	3072+3072	Incl.						100	150	
Bipper, 3/4/5-dr, Van with fixpoint, 08-	7531	3911	3070	Incl.	751	391	3070	Incl.	7531+751	3911+391	3070+3070	Incl.						100	150	
Bipper, 3/4/5-dr, Van with roof railing, 08-					775	391												75		
Partner air, 5-dr, MPV with roof railing, 01-					757	391		Incl.										75		
Ranch, 3-dr, Van, 97-					750	392	1184										379	50		
Ranch, 4-dr, Van, 97-					750	392	1184										379	50		
Ranch, 5-dr, Van, 97					750	392	1184										379	50		

> Heavy-Duty Load Carriers: Fit Guide

*Check mounting instruction for correct positioning

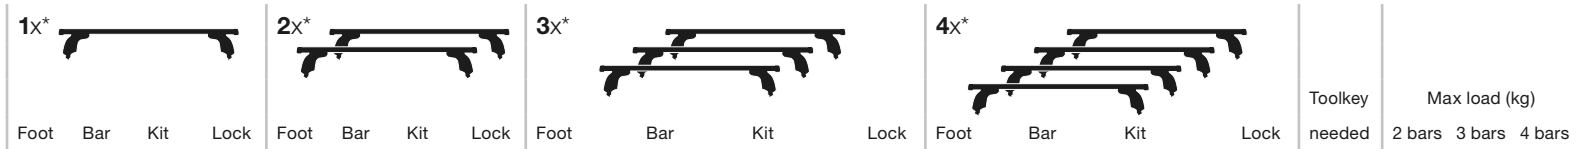

RENAULT

Kangoo, 5-dr, Van with fixpoint, 98-07, 08-					753	391	3021	Incl.												75		
Master, 4-dr, Van with fixpoint, 98-03, 04-06, 07-	7531	3931	3045	Incl.	753	393	3045	Incl.	7531+753	3931+393	3045+3045	Incl.	753+753	393+393	3045+3045	Incl.				100	150	200
Master, 5-dr, Van with fixpoint, 98-03, 04-06, 07-	7531	3931	3045	Incl.	753	393	3045	Incl.	7531+753	3931+393	3045+3045	Incl.	753+753	393+393	3045+3045	Incl.				100	150	200
Trafic, 2-dr, Single cab with fixpoint, 01-	7531	3931	3047	Incl.																50		
Trafic, 4-dr, Van with fixpoint, 01-	7531	3931	3047	Incl.	753	393	3046	Incl.	7531+753	3931+393	3047+3046	Incl.	753+753	393+393	3047+3046	Incl.				100	150	200
Trafic, 5-dr, Van with fixpoint, 01-	7531	3931	3047	Incl.	753	393	3046	Incl.	7531+753	3931+393	3047+3046	Incl.	753+753	393+393	3047+3046	Incl.				100	150	200
Trafic, 5-dr, Van with fixpoint, high roof, 01-	7531	3921	3046	Incl.	753	392	3046	Incl.	7531+753	3921+392	3046+3046	Incl.	753+753	392+392	3046+3046	Incl.				100	150	200

SEAT

Inca (Mk.I), 3-dr, Van with fixpoint, 96-03					753	391	3007	Incl.												75		
Inca (Mk.I), 3-dr, Estate with fixpoint, 96-03					753	391	3007	Incl.												75		

TOYOTA

Super carry, 5-dr, Van, 86-98	9521	3931		527	9521	393		527	9521+9521	3931+393		527	9521+9521	393+393		527				100	150	200
Hi ace, 5-dr, Van, 83-95	9521	3931		527	9521	393		527	9521+9521	3931+393		527	9521+9521	393+393		527				100	150	200
Hi ace, 5-dr, Van, 96-06, 07-	7531	3921	3043	Incl.	753	392	3043	Incl.	7511+753	3921+392	3043+3060	Incl.	7531+753+7511	392+392	3043+3060	Incl.				100	150	200
Hi lux, 2-dr, Pickup, extended, 87-95	750	3921	1118														379			37.5		
Hi lux, 2-dr, Pickup, extended, 98-04	750	3921	1083														379			30		
Hi lux, 2-dr, Pickup, 98-04	750	3921	1083														379			30		
Hi lux, 2-dr, Single cab, 05-	750	3921	1348														379			25		
Hi lux, 4-dr, Double cab, 05-					750	392	1350										379			50		
Hi lux, 4-dr, Double cab, 98-04					750	392	1083										379			60		

VOLKSWAGEN

Caddy (Mk.II), 3-dr, Van with fixpoint, 98-03					753	391	3007	Incl.												75		
Caddy (Mk.II), 3-dr, Estate with fixpoint, 96-03					753	391	3007	Incl.												75		
Caddy (Mk.III), 4-dr, Van with fixpoint, 04-					753	391	3022	Incl.												75		
Caddy (Mk.III), 5-dr, Van with fixpoint, 04-					753	391	3022	Incl.												75		
Caddy (Mk.III), 4-dr, Estate with fixpoint, 04-					753	391	3022	Incl.												75		

> Heavy-Duty Load Carriers: Fit Guide

*Check mounting instruction for correct positioning

CAR MAKE	1x*				2x*				3x*				4x*				Toolkey needed	Max load (kg)		
	Foot	Bar	Kit	Lock	Foot	Bar	Kit	Lock	Foot	Bar	Kit	Lock	Foot	Bar	Kit	Lock		2 bars	3 bars	4 bars

VOLKSWAGEN

Caddy (Mk.III), 5-dr, Estate with fixpoint, 04-					753	391	3022	Incl.												75		
Caddy Maxi, 4-dr, Van with fixpoint, 08-	7511	3911	3022	Incl.	753	391	3022	Incl.	7511+753	3911+391	3022+3022	Incl.								75	112	
Crafter, 4-dr, Van with T-profile, 06-	7531	3931	3062	Incl.	753	393	3062	Incl.	7531+753	3931+393	3062+3062	Incl.	753+753	393+393	3062+3062	Incl.				100	150	200
Crafter, 4-dr, Van with T-profile, high roof, 06-	7531	3931	3062	Incl.	753	393	3062	Incl.	7531+753	3931+393	3062+3062	Incl.	753+753	393+393	3062+3062	Incl.				100	150	200
Crafter, 4-dr, Van with T-profile, extra high roof, 06-					No fit																	
Crafter, 4-dr, Van with fixpoint, 06-	7531	3931	3032	Incl.	753	393	3032	Incl.	7531+753	3931+393	3032+3032	Incl.	753+753	393+393	3032+3032	Incl.				100	150	200
Crafter, 4-dr, Van with fixpoint, high roof, 06-	7531	3931	3032	Incl.	753	393	3032	Incl.	7531+753	3931+393	3032+3032	Incl.	753+753	393+393	3032+3032	Incl.				100	150	200
Crafter, 4-dr, Van with fixpoint, extra high roof, 06-					No fit																	
LT, 4-dr, Van, high roof, 97-02	9531	3951		527	9531	395		527	9531+9531	3951+395			527	9531+9531	395+395		527			100	150	200
Transporter (T4), 91-96, 97-02					No fit																	
Transporter (T4), high roof, 91-96, 97-02					No fit																	
Transporter (T5), 2-dr, Single cab with fixpoint, 03-	7511	3921	3034	Incl.																50		
Transporter (T5), 4-dr, Double cab with fixpoint, 03-					751	392	3034	Incl.												100		
Transporter (T5), 4-dr, Van with T-profile, 03-	7511	3921	3044	Incl.	751	392	3034	Incl.	7511+751	3921+392	3044+3034	Incl.	751+751	392+392	3044+3034	Incl.				100	150	200
Transporter (T5), 4-dr, Van with fixpoint, 03-	7511	3921	3044	Incl.	751	392	3034	Incl.	7511+751	3921+392	3044+3034	Incl.	751+751	392+392	3044+3034	Incl.				100	150	200
Transporter (T5), Van, high roof, 03-					No fit																	
Transporter (T5), Van, extra high roof, 03-					No fit																	



www.modul-system.com